
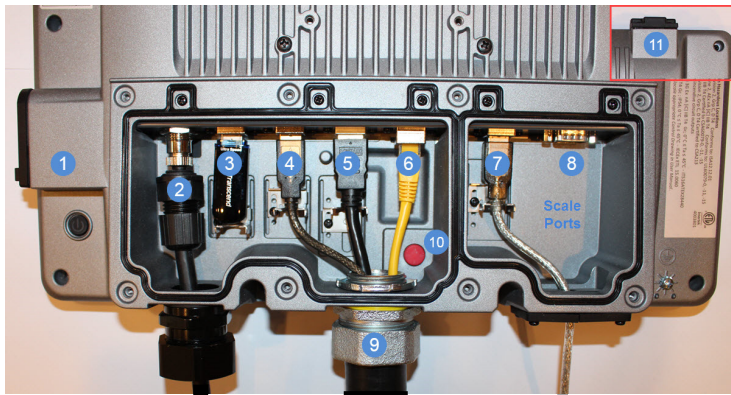



1. USB Port
2. Power
3. USB Backup Drive
4. USB Extension
5. HDMI (Optional)
6. Network Cable
7. USB Scale Port
8. Serial Scale Port
9. Conduit
10. Safety Switch
11. Wireless USB Port

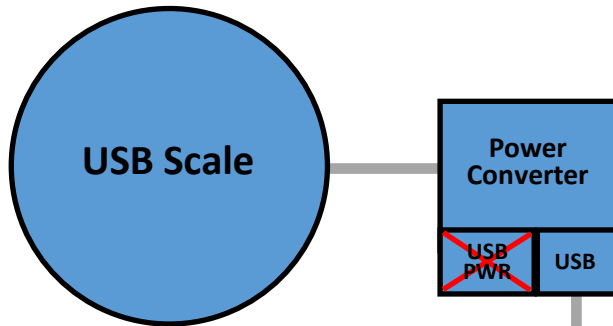



- USB —
- HDMI Video —
- Network Cable —
- Scale Cable —
- Power —

## TouchMix® XI Connection Diagram for USB Scale

(The PPG Help Desk and CSSS Team does not support wireless networks)

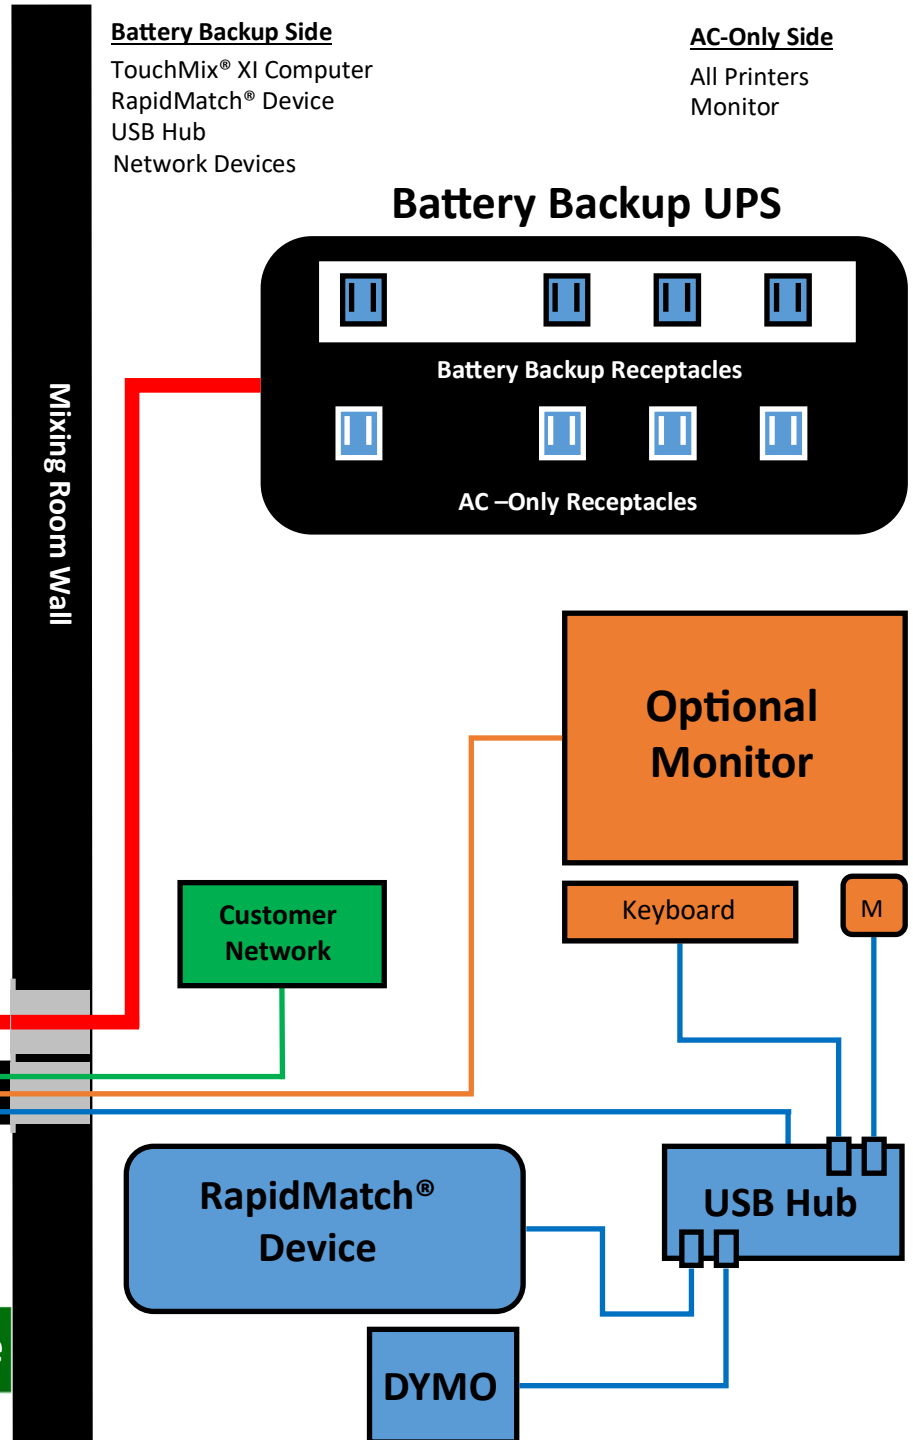

1. USB Port
2. Power
3. USB Backup Drive
4. USB Extension
5. HDMI (Optional)
6. Network Cable
7. USB Scale Port
8. Serial Scale Port
9. Conduit
10. Safety Switch
11. Wireless USB Port

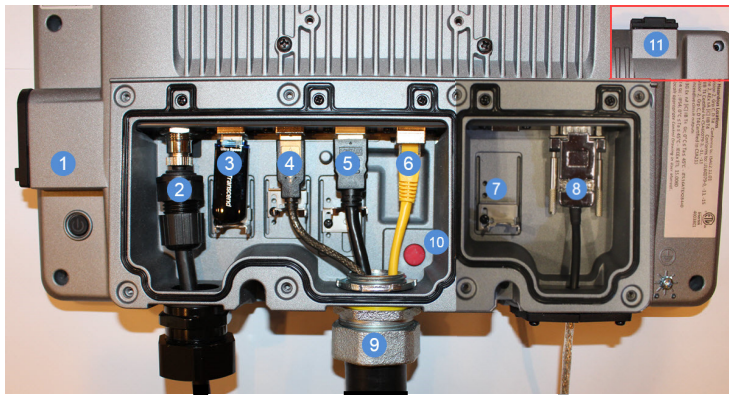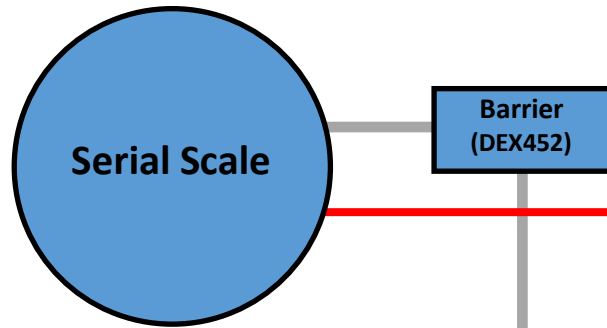

- USB —
- HDMI Video —
- Network Cable —
- Scale Data Cable —
- Power —

## TouchMix® XI Connection Diagram for Serial Scale

(The PPG Help Desk and CSSS Team does not support wireless networks)


### Battery Backup Side

TouchMix® XI Computer  
 RapidMatch® Device  
 USB Hub  
 Network Devices

### AC-Only Side

Monitor  
 All Printers  
 Network Devices

### Battery Backup UPS

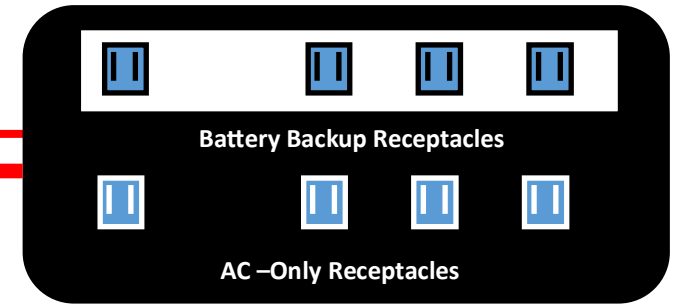

Mixing Room Wall

